

TIME CHANGE INSTRUCTIONS (Various Systems)

TOSHIBA DK PHONES

From main phone, press ICM or DN
Dial # 6 5 2
Enter HH/MM/SS in 24-hour format
Press REDIAL then SPKR

TOSHIBA CIX PHONES

From any phone, press ICM or DN
Dial # 6 5 2
Enter HH/MM/SS in 24-hour format
Press #

TOSHIBA STRATAGY VOICEMAIL

Dial voicemail pilot extension (usually 500)
When voicemail answers press # *
Dial Mailbox Number 999#
Enter 999# Security Code (or 999997#)
Press 8 for System Administration and follow instructions

IWATSU PHONES

From main phone press SPKR
Press FEAT then dial 64
Enter HH/MM/SS in 24-hour format
Wait for tone then press SPKR

IWATSU VOICEMAIL

Dial extension 54
Dial System Admin box (201, 249 or 777)
Press 4 for System Management
Follow instructions

SAMSUNG DCS PHONES

From any display phone press TRSF
dial 200
Dial 12341 then press TRSF
Press TRSF then dial 505
Enter W (day of week, 0=Sunday)
MM/DD/YY:HH/MM (24-hour format)
Press TRSF

SAMSUNG PROSTAR PHONES

From any display phone dial #20
Dial 12341 #
Dial # 5 5 then enter YY/MM/DD/
W (day of week, 0=Sunday) HH/MM
(24-hour format)
Dial #

PANASONIC DBS PHONES

From extension 10 or 100
Press ON/OFF then PROG
Dial ## then press first Line key
(bottom row left)
Dial 1# then 2#
Enter HH/MM in 24-hour format
Press # then ON/OFF

PANASONIC 576 or 576HD PHONES

From any phone
Press ON/OFF then PROG ** CONF
At the 81 level, enter 000
Press HOLD
Enter date (YMMMDD)
Press HOLD
Enter time (HHMM)
Press HOLD
Enter day of the week (1=Mon, 2=Tues,
etc.)
Press HOLD then press ON/OFF

TELEKOL VOICEMAIL

Dial voicemail pilot extension (usually 50 or 500)
When voicemail answers press # *
Dial 99 (or 999 if you have 3-digit extension numbers)
Access code 9876
Press 9 again
Press 3 for System Configuration
Press 3 again to set new time in 24-hour format, then listen to confirm